



Installation guide

for SlipClip



SlipClip Preparation

- Remove a strip of clips from the bundle.
- Snap off desired number of clips to load panel.



INSTALLATION

SLIPCLIP.

1. The hooked portion of the SlipClip is oriented toward the centre of the panel.
2. Slide the corner of the SlipClip onto the corner of the ShadowClad panel.
3. Straighten the hooked portion of the clip toward the centre of the panel while pushing it onto the panel.
4. Slide the clip along the panel to the desired location.



SlipClip Install


1




2



3

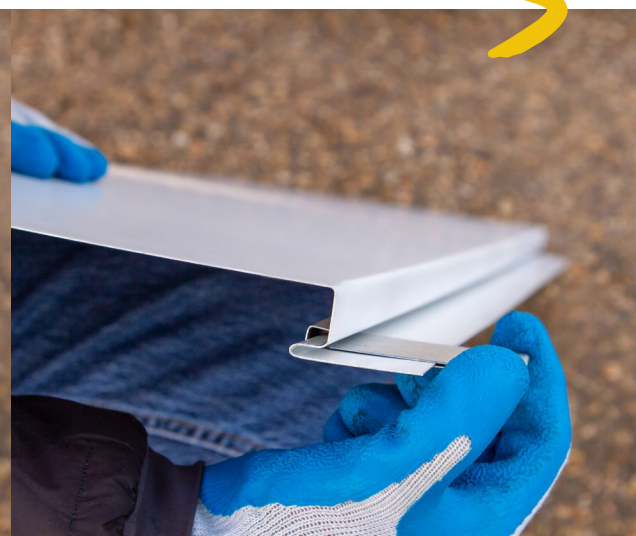

4

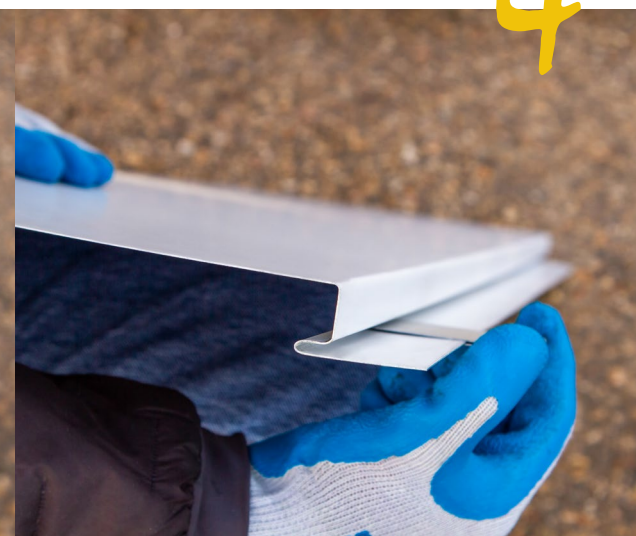



PANEL INSTALL – SlipClip.

- Engage panel into the lock.
- Check that the panel is level/plumb and secure with clips.
- For vertical installations, pin the top of the panel to stop it from sliding down.
- Maximum clip spacing to be 24" OC.

